


Swift® Price Computing Retail Scales **ADAM**



With ABS plastic construction and stainless steel top pan, the easy-to-clean Swift scale provides an ideal weighing solution for retail operations. Featuring price-computing capability, the Swift can output data in different languages. Well-suited for deli or catering use, the Swift contains a highly visible backlit LCD to show weight, unit price and total. Customers can view and verify totals either on the rear side of the scale or, optionally, a pillar-mounted rear display. Specially designed drip channels beneath the pan help divert spills. For efficient customer service, Swift can store up to 161 of the most popular products and recall them with a few key strokes. An RS-232 interface or optional USB offer connection to computers and printers, allowing rapid data transmission. The Swift's rechargeable battery and auto power-off feature make this scale an excellent choice for market stands.

*Simple and stylish for fast
price computing in a retail setting*

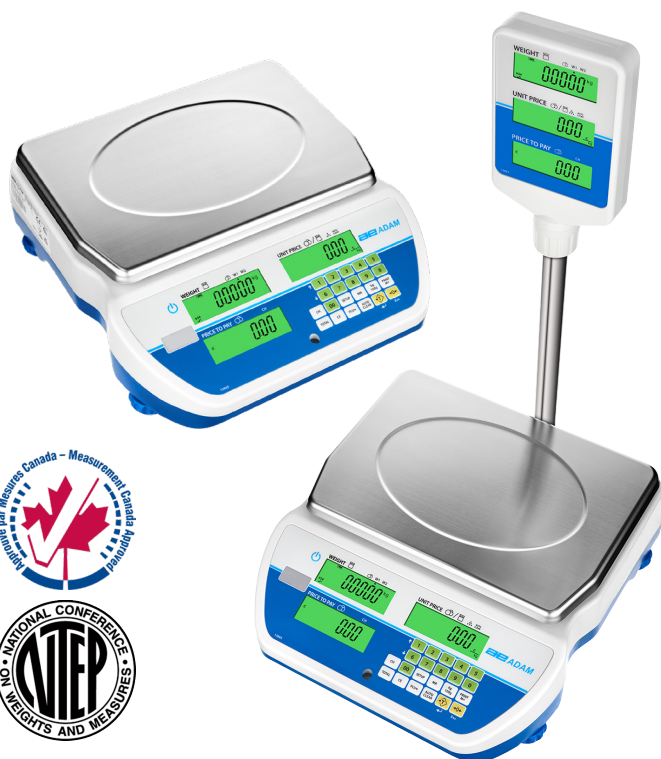

Features

- Backlit LCD shows weight, unit price and total price, to provide the key information simultaneously
- Rear display mounted on a pillar or back of the scale lets customers see key data
- Adjustable levelling feet help optimize setup
- Color-coded keys facilitate quick recognition of the most frequently used buttons
- RS-232 interface provides speedy connection to computers and printers
- Optional USB interface simplifies data communication
- Overload protection helps prevent damage to internal components
- Drip channels help divert spills away from the scales internal components
- Auto-clear function
- Product look up (PLU) memory locations store a range of items for recall
- Preset tare function speeds the process of repetitive weighing
- Zero-tracking feature ensures display returns to zero reading
- NTEP approved
- Rechargeable battery included for operation almost anywhere
- Auto power-off feature conserves battery life

Applications

- Weighing
- Price Computing

About ADAM:

For the past 50 years, professionals worldwide have relied on Adam Equipment for an extensive selection of dependable and affordable weighing equipment. Adam provides the right balance of speed, performance and value.

Product Details

Model	SWZ 6Da	SWZ 15Da	SWZ 30Da	SWZ 60Da	SWZ 6DPa	SWZ 15DPa	SWZ 30DPa	SWZ 60DPa
Capacity	3lb / 6lb	6lb / 15lb	15lb / 30lb	30lb / 60lb	3lb / 6lb	6lb / 15lb	15lb / 30lb	30lb / 60lb
Readability	0.001lb / 0.002lb	0.002lb / 0.005lb	0.005lb / 0.01lb	0.01lb / 0.02lb	0.001lb / 0.002lb	0.002lb / 0.005lb	0.005lb / 0.01lb	0.01lb / 0.02lb
Repeatability (S.D.)	0.002lb / 0.004lb	0.004lb / 0.01lb	0.01lb / 0.02lb	0.02lb / 0.04lb	0.002lb / 0.004lb	0.004lb / 0.01lb	0.01lb / 0.02lb	0.02lb / 0.04lb
Linearity (+/-)	0.003lb / 0.006lb	0.006lb / 0.015lb	0.015lb / 0.03lb	0.03lb / 0.06lb	0.003lb / 0.006lb	0.006lb / 0.015lb	0.015lb / 0.03lb	0.03lb / 0.06lb
Pan Size	11.8" x 8.3" / 300 x 210mm							
Weighing Units	lb							
PLUs	161							
Interface	RS-232, Optional USB							
Calibration	External							
Display	Backlit LCD with 0.6" / 15mm-high digits							
Power Supply	12V 800mA adapter / Internal rechargeable battery							
Operating Temp.	14°F to 104°F / -10° to 40°C							
Construction	ABS plastic with stainless steel pan							
Overall Dim.	12.5" x 14" x 4.75" / 315 x 355 x 120mm				12.8" x 14" x 21" / 326 x 355 x 535mm			
Net Weight	8.8lb / 4kg				9.9lb / 4.5kg			
Approval Board	NTEP, Measurement Canada							

Accessories

Item Number... Description

3074010267USB cable
 3022013912.....Hard carrying case with lock
 3022013911.....In-use cover
 1120011156.....ATP thermal printer
 3014011014.....RS-232 cable M-F
 303149759.....Vegetable Scoop (complete with fitting to scale)
 303149760.....Confectionery Scoop (complete with fitting to scale)
 600002028.....AdamDU Data Collection Program
 700660290.....Calibration certificate
 1120014641.....AIP impact printer
 2020013915USB option

Key Accessories



AdamDU Data Collection Program

AdamDU offers several useful functions such as graphing, statistical analysis, and data export to XML, CSV, HTML and Text files, or directly to Windows® applications including Microsoft® Excel, Microsoft® Word or the Windows® Clipboard. With support to accept and manage up to 8 balances or scales simultaneously, AdamDU is the best choice in data collection software for a range of applications.



ATP2 Thermal Printer

Easy-to-use features combined with quick set-up equals a truly versatile thermal printer. A single push-button feed key and three easy-to-read LED indicators make operation simple.